

## Configuration Mode

*Instructions to Turn Off Wand Opti*

Some parameters can be configured in configuration mode on the handheld. Some parameters require the password **1542** be entered to allow customization.

Note that some parameters also require the C220 receiver to be on and linked to be modified.

To enter configuration mode, make sure the H212 handheld is powered off first. Then:

1. Press and hold Red
2. Press and hold Green
3. Release Red
4. Continue holding Green for 5 more seconds until the two LEDs come on solid.
5. Release Green

You should now be in Config mode. Left/Right scrolls through the list of available settings. Up/Down selects the options for each setting. Once you are satisfied, press Green to save your options or Red to cancel and exit.

After saving, exit the Config mode by pressing Red.

Power up the system normally and your new settings will be active.

## Parameter Details

Machine – Change the machine type. Currently there is only one machine type option. \*Note: This parameter requires the receiver be powered on\*

Perform. – This parameter allow strade-off between radio range, control responsiveness, and run-time per battery charge.

Auto-off – If no buttons are pressed on the handheld, the handheld will automatically turn itself off after this period of time.

Wand? – Selects if the system has a Smart Wand sensor. If this parameter is set to "Required", the wash function will not turn on unless the Wand is linked and has not detected a drop. If this is set to "None", a Smart Wand will not link to the system and not detect a drop. This parameter requires the password 1542 be entered to change. \*Note: This parameter requires the receiver be powered on\*

Loadmaxx – Selects if the receiver is hooked up to an Air-Weigh Loadmaxx device and the weight should be shown. \*Note: This parameter requires the receiver be powered on\*

Units – Selects the units to display the Loadmaxx weight.